

ARF PLUS PRO F18 CDEF HORNET

1/5.75 Scale Almost-Ready-To-Fly RC Jet
Assembly and operations manual



Specifications

Type : T.A.V.S ARF PRO
Scale : F18CD 1/5.75
Length : 116.8": (2968mm)
Weight : 21—25 Kg
Radio : 12 Ch (8—12servo's)

F18EF : 1/6.25
Span : 78.3 ": (1988mm)
Engine : 1 x 18-21 Kg or 2 x 10 - 12 Kg

The F-18 "Hornet" by Skymaster

The 1/5.75 F18CD produced by Skymaster is the result of years of R&D work and excessive testing. We are proud that you have decided to buy the best ARF 1/5.75 F18 in the market today. We hope you enjoy your F18! Please note that the photos show certain views from the prototypes. Some pictures will show F18F and some F18D! Some modifications and upgrades might have taken place by the release of the model. We have tried to produce a very scale replica of the Hornet. Many scale options are included with your model including operating canopy, speed brakes, spoilers and ordinance kit. This manual describes the assembling of "PRO" model. Opening canopy, speed brakes, landing gear and doors are factory installed. Before you start building and setting-up your aircraft, please make sure you have read this instruction manual, and understood it. If you have any questions, please don't hesitate to contact us. Below are the contact details:

Office Taiwan:

No.15, Min-San 3rd Street, Ren-Wu Area, Kaohsiung, 814, Taiwan, R.O.C.

TEL: +886 9 3299 7923

FAX: + 886 7373 1215

<http://www.skymasterjet.com>

Sales : skymaste@skymasterjet.com

Technical support : morne.m@pixie.co.za

Skymaster
ARF PLUS PRO

F18 arf pro

Assembly & Operation Manual

Index:

INTRODUCTION.....	3
DISCLAIMER.....	3
WARNING.....	3
ARF PAINT.....	4
FINISHING YOUR F16 ARF.....	4
HANDLING & TRANSPORTING	5
TOOL LIST.....	6
HEALTH.....	7
GENERAL ASSEMBLY TECHNIQUES.....	7
RADIO EQUIPMENT & ACCESSORIES.....	8
KIT CONTENTS.....	9
OPTIONAL PARTS.....	10
SLATS.....	12
FLAPS.....	13
STABILIZERS.....	14
RUDDER.....	15
FUSELAGE REAR.....	16
FUSELAGE JOINT.....	17
FUEL CELLS.....	17
FUEL DIAGRAM.....	18
AIR SYSTEM	19
AIR DIAGRAM.....	20
TURBINE INSTALLATION.....	21
COCKPIT & CANOPY.....	22
EQUIPMENT INSTALLATION INTO THE F18ARF.....	23
BEFORE YOU FLY.....	24
ORDINANCE.....	26



F18 arf pro

Assembly & Operation Manual

INTRODUCTION

Thank you for purchasing Skymaster arf pro F18! We have put a lot of effort and time into this model. We at Skymaster strive to be a market leader in the ARF—jet market. We were the first company to produce ARF—jets in the world and we would like to continue being amongst the best. Although we have made every effort that this model was fit for shipping, we would like you to inspect the contents and call your nearest dealer immediately if any defects or missing parts are spotted! This manual will allow you to duplicate the factory prototypes.

LIABILITY

You have acquired a kit, which can be assembled into a fully working R/C model when fitted out with suitable accessories, as described in the instruction manual with the kit. However, as manufacturers, we at Skymaster are not in a position to influence the way you build and operate your model, and we have no control over the methods you use to install, operate and maintain the radio control system components. For this reason we are obliged to deny all liability for loss, damage or costs which are incurred due to the incompetent or incorrect application and operation of our products, or which are connected with such operation in any way. Unless otherwise prescribed by binding law, the obligation of the Skymaster company to pay compensation is excluded, regardless of the legal argument employed. This applies to personal injury, death, damage to buildings, loss of turnover and business, interruption of business or other direct and indirect consequent damages. In all circumstances our total liability is limited to the amount which you actually paid for this model.

BY OPERATING THIS MODEL YOU ASSUME FULL RESPONSIBILITY FOR YOUR ACTIONS.

It is important to understand that Skymaster, is unable to monitor whether you follow the instructions contained in this instruction manual regarding the construction, operation and maintenance of the aircraft, nor whether you install and use the radio control system correctly. For this reason we at Skymaster are unable to guarantee, or provide, a contractual agreement with any individual or company that the model you have made will function correctly and safely. You, as operator of the model, must rely upon your own expertise and judgment in acquiring and operating this model.

WARNING

This 'jet' aircraft is a high-end product and can create an enormous risk for both pilot and spectators, if not handled with care, and used according to the instructions. Make sure that you operate your jet according to the AMA rules, or those laws and regulations governing model flying in the country of use. The engine, landing gear, servos, linkages and control surfaces have to be attached properly. Please use only the recommended servos and accessories. Make sure that the 'Centre of Gravity' is located in the recommended place. Use the nose heavy end of the CG range for your first flights. A tail heavy plane can be an enormous danger for you and all spectators. Fix any weights, and heavy items like batteries, very securely into the plane. Make sure that the plane is secured properly when you start the engine. Have a helper hold your plane from the nose before you start the engine. Make sure that all spectators are far behind, or far in front, of the aircraft when running up the engine. Make sure that you range check your R/C system thoroughly before the 1st flight. It is absolutely necessary to range check your complete R/C installation first WITHOUT the engine running. Leave the transmitter antenna retracted, and check the distance you can walk before 'fail-safe' occurs. Then start the engine, run at about half throttle and repeat this range check. Make sure that there is no range reduction before 'fail-safe' occurs. If the range with engine running is less then with the engine off, please DON'T FLY at that time. Make sure that your wing spar tube is not damaged. Check that the anti-rotation dowels for the wings are not loose. Check that the wing, stab, fin and nose retaining bolts are tight. Please don't ignore our warnings, or those provided by other manufacturers. They refer to things and processes which, if ignored, could result in permanent damage or fatal injury. Secure the plane before starting engine.



F18 arf pro

Assembly & Operation Manual

ARF Paint

The color finish on your Skymaster F18 arf pro model was applied out of the mold. We have used only the highest standard automotive paints to finish your model.

Should you damage the finish, Skymaster stock the color paint and hardener required for the repair. A good automotive spray painter should also be able to mix and supply the correct samples for repair.

If you have no experience in the use of these paints, it will be best to seek assistance.

Do not leave your model unprotected in the sun! always cover your model or park it in the shade. Extreme temperatures will damage the paint!

Finishing Your All White F18 ARF PRO

It is always best to fully assemble the model before painting. By doing so no damage or glue prints will ruin the paint.

The all white model will have some release agent on the surfaces.

Use #1000 wet and dry paper to sand the entire model. Mold lines can be sanded and filled using normal automotive fillers.

Please be extra careful when sanding near the hinge line! The hinges can easily be damaged. When masking and painting please make sure the control surfaces are not bend past 90—180 degrees extensively. This will cause the hinges to crack and may cause flutter.

The clear canopy are not installed. It is best to install these components after painting was done.



F18 arf pro

Assembly & Operation Manual

HANDLING & TRANSPORTING

Composite models are very light but strong. These characteristics do have a down side! It is brittle.

Take care when handling your model. DO NOT ATTEMPT TO PICK UP AN FULLY FUELED MODEL BY THE LEADING EDGE BY YOURSELF! The leading edges will crack and delaminate. Full size jets have specially marked access points for the hooks of cranes!

Inspect your model before and after a rough landing. Make sure all parts are safe and sound.

Inspect model before and after transport. A sudden stop can easily cause an unnoticed dent!

We recommend to REMOVE the elevators and wings for transport. It will only take a couple of seconds.

The wings and tails are very flight worthy structures. They are light and extremely strong , however, they will dent if mishandled. Always support these structures on clean soft foam rubber.



F18 arf pro

Assembly & Operation Manual

Tools and Adhesives

Tools etc:

This is a fairly quick and easy plane to build, for a jet model, not requiring difficult techniques or special equipment, but even the building of Skymaster aircraft requires some suitable tools! You will probably have all these tools in your workshop anyway, but if not, they are available in all good hobby shops, or hardware stores like "Home Depot" or similar.

1. Sharp knife (X-Acto or similar)
2. Allen key set (**metric**) 2.5mm, 3mm & 5mm
3. Sharp scissors, curved type for canopy
4. Pliers (various types)
5. Wrenches (**metric**)
6. Slotted and Phillips screwdrivers (various sizes)
7. Drills of various sizes
8. Battery drill and Dremel tool (or similar) with cutting discs, sanding tools and mills
9. Sandpaper (various grits), and/or Permagrafit sanding tools.
10. Carpet, bubble wrap or soft cloth to cover your work bench (most important !)
11. Car wax polish (clear)
12. Paper masking tape
13. Denaturized alcohol, Acetone, or similar (for cleaning)



Adhesives:

Not all types of glues are suited to working with composite parts. Here is a selection of what we normally use, and what we can truly recommend. Please don't use inferior quality glues - you will end up with an inferior quality plane, that is not so strong or safe. Jet models require good gluing techniques, due to the higher flying speeds, and hence higher loads on many of the joints. We highly recommend that you use a slow cured epoxy for gluing highly stressed joints, like control horns, into position. The most commonly used is 'Aeropoxy'. The self-mixing nozzles make it easy to apply. It takes about 1 - 2 hours to start to harden so it also gives plenty of time for accurate assembly. Finally it gives a superb bond on all fiberglass and wood surfaces.

1. CA glue 'Thin' and 'Thick' types. We recommend ZAP, as this is a very high quality.
2. ZAP-O or Plasti-ZAP, odorless (for gluing the clear canopy)
3. 30 minute epoxy (stressed joints must be glued with 30 min and NOT 5 min epoxy).
4. Aeropoxy/Loctite Hysol 3462 or equivalent (optional, but highly recommended)
5. Epoxy laminating resin (12 - 24 hr. cure) with hardener.
6. Milled glass fiber, for adding to slow epoxy for stronger joints.
7. Micro-balloons, for adding to epoxy for lightweight filling.
8. Thread-locking compound (Loctite, or equivalent)

At Skymaster we try our best to offer you a high quality kit, with outstanding value-for money, and as complete as possible. However, if you feel that some additional or different hardware should be included, please feel free to let us know.



F18 arf pro

Assembly & Operation Manual

HEALTH

Use a mask (available at auto paint stores) to protect from inhaling the glass or carbon fiber dust. Use this mask whenever you are sanding or cutting fiberglass or carbon fiber materials. Use a charcoal filter paint mask (available at auto paint supply stores) when spraying any primer or paint. Spray out of doors or in a properly vented spray booth. Use safety glasses any time rotary tools, such as Dremel cut-off disc or Perma-Grit cutters, are being used.

GENERAL ASSEMBLY TECHNIQUES

We recommend to wax the model before assembling. This will help protect the finish from an epoxy finger print. Wax will not help for CA glues!

Extra glue, extra paint, extra resin will add up to a heavy model. Plan before you glue! The glass cloth side of parts to glue, should be sanded with #80 grit paper for best glue adhesion.

Support the fuselage on foam pads.

Skymaster makes every attempt to insure that the parts fit. However, due to manufacturing tolerances, some parts may fit a little tight. Always trial fit parts and adjust if needed.

Only use high quality adhesives such as the ZAP products from Pacer Technology.

For extremely high stress areas we recommend "Aeropoxy." It is the strongest and best gripping adhesive we have found.

If fuel or grease are on the surface, first clean with acetone or thinners.

Clean off all excess glue—excess glue is excess weight.

Always check the outside skin of the model to look for any glue residue and remove it with Acetone before it cures. "Aeropoxy" is tough to remove once it has thoroughly cured.



F18 arf pro

Assembly & Operation Manual

Radio equipment

Failure to use the recommended servos, output arms, extensions, and hardware may result in a loss of control!

Throughout this manual we make use of various types of servos and radio equipment!

The prototype was flown using MKS servos with powerbox bus system!

If you make use of another manufacturer, please use equipment with similar specifications! For JR we recommend DS8911HV servos.

The F18 will require extension leads! Please use high quality extension leads. Make use of ceramic non ferrite cores if leads exceeds 1 meter. We recommend using X-bus system. This will eliminate long power leads.

Use dual battery management systems and dual RX equipment. With the introduction of 2.4 GHz even quad RX systems are considered as normal for a jet model.

Always center and install the correct output arms while on the bench, once the servo is in the aircraft access to the servo arm screw is sometimes limited.

Do not save any money when buying radio equipment. The price of servo's are far from the price of replacing the entire model.

REMEMBER: The best equipment is only as good as the weakest link. Ask yourself if this servo or link or lead etc is worthy of my trust to protect my very large investment...

Accessories

1. 2 MKS HBL380 servo's for the elevator.
2. 2 MKS747 for flaperons
3. 2 MKS777 for rudder
4. 2 MKS747for slats
5. 1 MKS747 for steering servo.
6. 3 x 2way valve + 1 x 1way valves + sequencer for landing gear + doors + brakes
7. 1 x 2 way valve for speed brake
8. 2 x 2way + sequencer for opening canopy
9. 1 x 2way for speedbrake
10. Powerbox Royal with build in matchbox function.
11. Pneumatic support set for landing gear
12. 1 x Turbine motors, with thrust range between 18kg and 21kg, with accessories.
13. Fuel tubing, Hopper tank, festo fittings, fuel filters, fuel tube etc
14. Cable ties in various lengths.
15. Radio system with S-bus or X-bus technology (will simplify the radio installation)

***Did you understand everything in this manual completely?
Then, and only then, let's start assembling your F-18. If not, please read it again
before you start the assembly.***

F18 arf pro

Assembly & Operation Manual

Kit Contents



Picture A

F18 ARF PRO Contents:

- Picture A Fuselage front and rear section.
 Fin + Rudders & tail cone.
 Nose gear + Main gear + doors installed + spoilers installed
 Wings left and right + flaps + ailerons
 Elevator left and right
 Canopy assembly + glass



F18 arf pro

Assembly & Operation Manual

OPTIONAL PARTS



Photo 1

Slat Mounts Aircraft Grade Aluminum
Included with kit

3 x Air Tanks
1 x Retract Valve
2 x Filler & 2 x Pressure Gauges
1 x Electronic Brake Valve
5 x Air Tubing, 10 x Quick Disconnect



Photo 2



Photo 3

Fuel Tank
Accessory Set



Photo 4

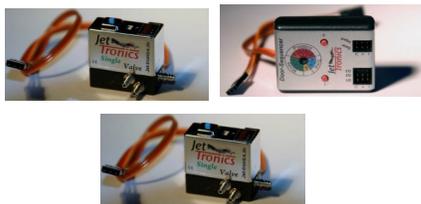


Photo 5

Jetronic 2way & 1 way valve
& Sequencer
Control Brake, Gear and Doors



Photo 6

Stainless Tail Pipe
Bifucated or 2 x
straight pipes
Cockpit + Pilot



Photo 7



F18 arf pro

Assembly & Operation Manual



Photo 8

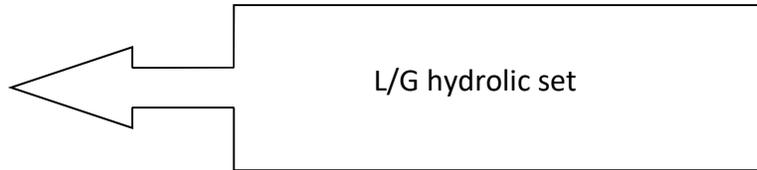


Photo 9

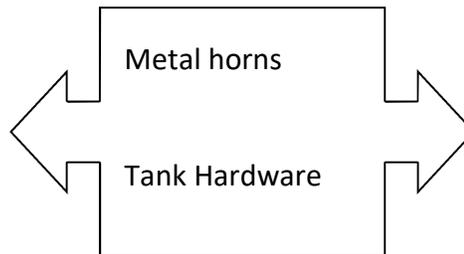


Photo 10



Photo 11

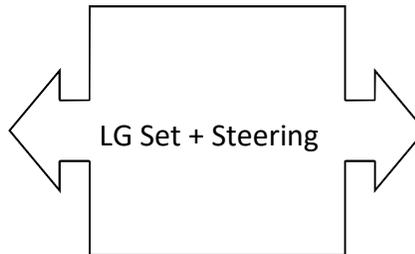


Photo 12



Photo 13

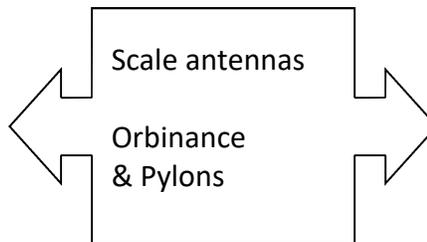


Photo 14



F18 arf pro

Assembly & Operation Manual

WINGS

NOTE: Make sure to have some sort of protective foam on the work bench. This will protect the paint surface from unwanted dents. Assemble both wings simultaneously. Mark ✓ each step.


The F18 have 3 control surfaces on each wing. Slat Aileron and Flap. It is up to you in what configuration you would like to build F18. You can opt for full flaps on the wing and tailerons. Or you can go with flaperons mixed with ailerons. The F18 with the help of slats can fly real slow. It is important to make sure the SLAT STOP is working properly for the safety concern.

SLATS:

- Remove and mark servo covers and inspect plywood. Use dremel to clean out some glue and ply to make sure servos will fit well.
- Pull out the pin hinge and remove the slat.
- A factory installed bellcrank will be exposed.
- Install metal horn to 8911 slat servo and 2 HD L-brackets
- The bearings on metal horn should be 10mm centre/centre.



- The bellcrank slot must fit over the servo horn bearings for slide fit.
- Check operation against wing. Make sure no binding near the "slat stop".
- Install servo cover.

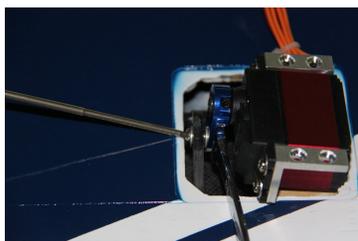

- Repeat for other wing

F18 arf pro

Assembly & Operation Manual

FLAPS & AILERONS:

- *NOTE: The flap servos are located inside the wing. It is very important to match the flap actuator with flaplet fairing actuator. It is factory installed.*



Photo 22



Photo 23



Photo 24

- Fit 2 L-shape servo brackets to DS8911 servos and secure to wing. Do same for aileron.
- Flap servo horn 30mm facing rear. Install pushrod.
- Secure extension wire. Use safety clips on joint.
- Trial fit wing to fuselage and check operation of flap and aileron.
- Cut the servo & pushrod cover and screw in position.



Photo 25



Photo 26

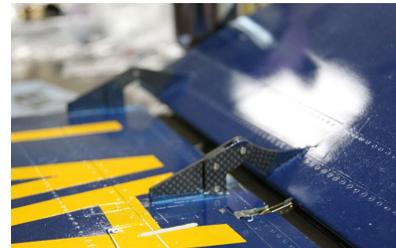


Photo 27



Photo 28



Photo 29




Photo 30

F18 arf pro

Assembly & Operation Manual

ELEVATORS

NOTE: Use some protective foam on the work bench to protect the paint surface from unwanted dents. A removable elevator mechanism is installed. Mark ✓ each step.

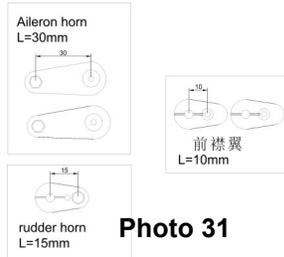

- Make up elevator horn. 1pr symmetrical. Bearing is 55 mm from center of screw to shaft.
- Trial fit JR8911 servo to elevator mount. The depth of the servo is **EXTREMELY IMPORTANT**. We have deigned the mount for 8911 servos. Some shimming may be needed to get correct height. The elevator horn must be as close as possible to fuselage skin. When happy secure servo with 4 screws.
- Fit servo horn and center servo using radio. Remove horn. Locate servo cover and mark location of horn. Drill hole to clear horn, refit horn and cover.
- Cut a slot slightly over size in the root of elevator to hold bearing mount for elevator control. Trial fit the elevator assembly with recess mount. **NOTE: because of the angle of elevator shaft and rear fuselage, the slot WILL NOT be flush with root of elevator. Do not glue flush!**
- Mix 30 minute epoxy and fill slot in root of elevator with glue. Use some oil/wax over the servo horn and root of elevator. This will prevent gluing horn to elevator.
- While glue still wet, fit elevator with bearing mount over servo horn and keep in position till glue set. Unclip elevator and check operation. Careful planning is needed.
- Make sure the elevator is clipped before each flight.
- Run servo wires away from tailpipe. Repeat for other elevator.



F18 arf pro

Assembly & Operation Manual

FIN & RUDDER

NOTE: Make sure to have some sort of protective foam on the work bench. This will protect the paint surface from unwanted dents. No play must be present. Mark ✓ each step.



Photo 35



Photo 36

- Fit horn to servo and centre servo. Make up rudder pull push pushrods.
- Fit servo to bracket.
- Make up rudder belcrank. Use Loctite to secure belcrank horn.
- Secure pushrods to horns. Use safety clips.
- Trial fit the rudder by inserting I-shape belcrank into rudder slot. Check that you have no play.
- Check left and right deflection. If happy secure fin with allen key. Repeat for other rudder
- Note—adjust rudders before installing tailpipes and turbines.



Photo 37



F18 arf pro

Assembly & Operation Manual

FUSELAGE REAR



Photo 38



Photo 39

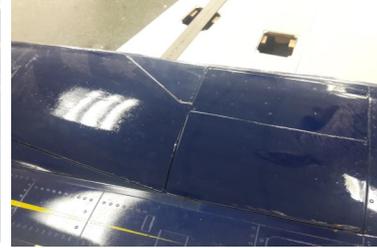


Photo 40

- Before joining the fuselage it is necessary to tidy up the servo wires. Make sure wires are secure and will not touch the tailpipe.
- Tidy up the air line. Factory installed on pro kit. Use quick disconnects between front and rear fuselage. This will make it easier to remove nose in future.
- The gear uses a locking cylinder. You need to wire it separate with a sequencer.
- The sequence for gear-up is : unlock lock cylinder--gear up--close doors . Then reverse this for gear down.
- Check operation of landing gear and doors.
- Check operation of speed brake. F18C 1 x and F18E x 2.
- Speed brake air tubing and LG + Door air tubing will all be factory fitted. Route to front of rear fuselage.

NOSE STEERING

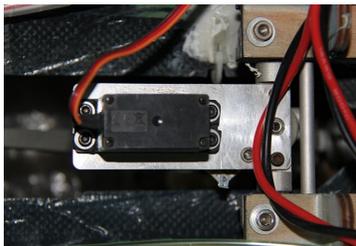


Photo 41



Photo 42

- Fit steering servo.
- Check operation of nose LG & doors.



F18 arf pro

Assembly & Operation Manual

FUSELAGE JOINT



Photo 43



Photo 44

- Route all air tubing and servo wires to front of fuselage.
- Install front tank before joining fuselage.
- Secure front fuselage with 6 x M4.

FUEL CELLS

NOTE: Bad plumbing lead to flame outs. This will destroy your model. Please take your time and do a good job.

- Make sure clunk moves freely and reaches all corners of inside of tanks.
- Fit to main tank. Mark pipes for “inlet” and “outlet”.
- Secure 2 saddle tanks in position. Saddle tanks will feed main tank. The main tank will feed UAT.
- Plumb tank using diagram on next page. Fill tank and check for leaks.
- Drain tank with turbine fuel pump and check no air. Bubbles in system until last drop is drained. A good plumbing will secure good turbine operation.



Photo 45

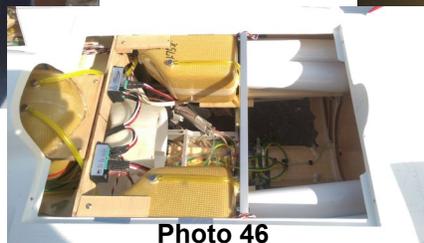


Photo 46

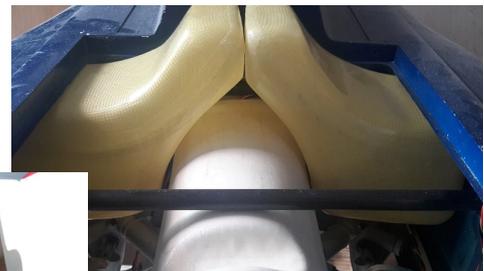


Photo 47

F18 arf pro

Assembly & Operation Manual

FUEL CELL DIAGRAM

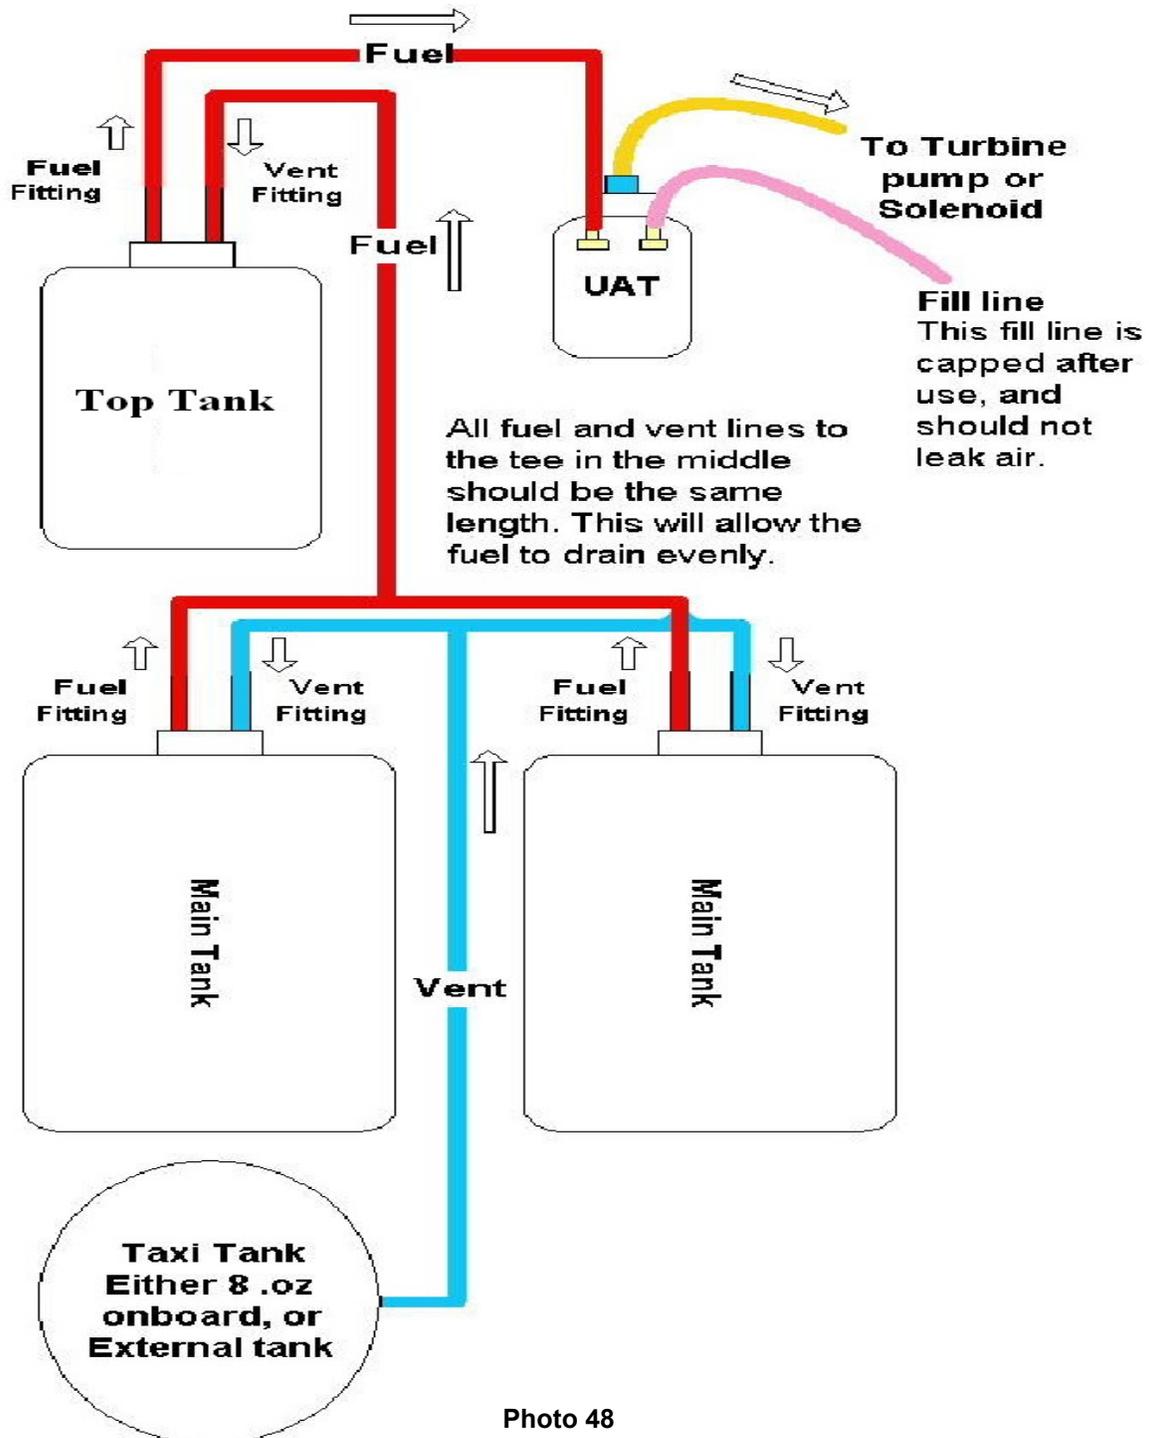


Photo 48



F18 arf pro

Assembly & Operation Manual

AIR SYSTEM:

You will need 2 x 2way and 1x 1way + sequencer for doors and brakes. You will need 1 x 2 way for speedbrake and 2 x 2 way for operating canopy and lock. All work done at factory.

- Glue the air tanks (3) with silicon
- Use quick connectors on fuselage joints to help with break up of model.
- Fit the 3 filler valves and 3 pressure gauges onto plywood tray.
- Plumb the landing gear, door and brake system by using color air tubing. T all same color tubing together until a single pipe emerge.
- Fit electronic valves + sequencers on tray.
- Plumb speed brake.
- Secure 3 x 2 way electronic valves. This will be for speed brake and opening canopy. Canopy use sequencer to lock canopy in down position.
- Air leaks can damage your model! Please do a thorough check for air leaks. Make sure the system can hold pressure for at least an hour in the up and down position.
- Do not rush this installation.

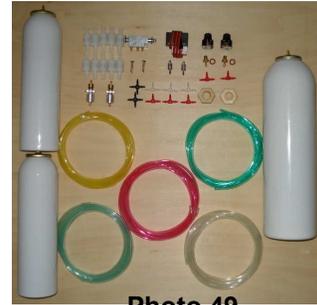


Photo 49



Photo 50



Photo 51



F18 arf pro

Assembly & Operation Manual

- For scale functions such as speed brake and opening canopy you will require additional 2 way electronic valves.



Photo 52

AIR DIAGRAM

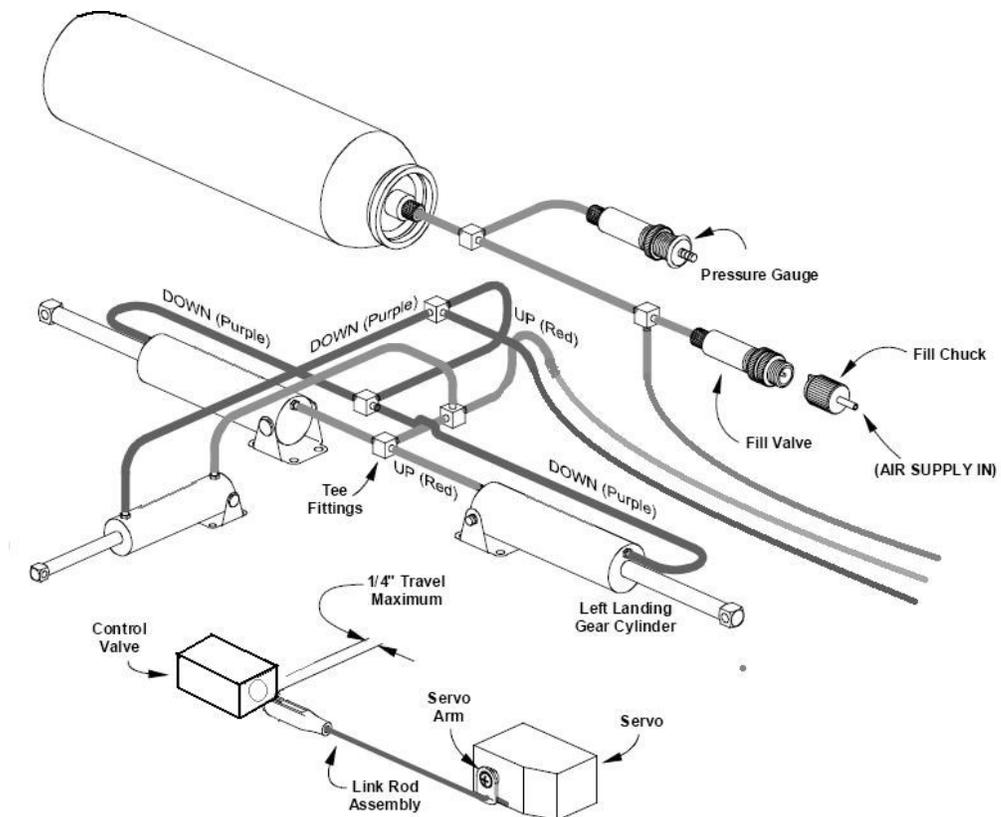


Photo 53



f18 arf pro

Assembly & Operation Manual

TURBINE INSTALLATION

NOTE: 3 versions can be ordered. 1. Single MID 2. Twin MID 3. Twin Tail



Photo 54



Photo 55



Photo 56



Photo 57

- Please follow the instructions supplied with your turbine.
- The F18 can be configured for twin turbine or single turbine operation. The twin turbine can further be configured to mid or tail installation. We show the twin tail installation. This option do not need any tail pipe. For mid installation a tail pipe is needed.
- For tail installations you need to adjust angle from 1 to 5 degree by using washers.
- The slots in rails are wide enough to make angle. 16kg need 3.5 degree.
- Use FOD screens. Secure all wires and cables and pipes. We recommend to make use of a mechanical shut off valve as well.
- Install LeFe / Li Po battery in nose for correct CG.
- The tailcones will twist and lock.



F18 arf pro

Assembly & Operation Manual

COCKPIT AND CANOPY (after painting)



Photo 58



Photo 59



Photo 60



Photo 61

NOTE : The opening canopy is option. It can be ordered. All work done by factory. You will need to install the 2 x 2way valves and sequencer to operate canopy cylinders.

- Cut cockpit to fit fuselage and front nose gear.
- Secure rear of cockpit with 2 screws.
- Check that canopy clear the cockpit. Trim if needed.
- Install pilot.



F18 arf pro

Assembly & Operation Manual

EQUIPMENT INSTALLATION INTO F18

□ Equipment installation is a personal venture. There is one golden rule: Do it as neat and logical as possible! This will make fault finding and service of components easier. The F18 basically consist of 7 circuits!

1. Servo wires
2. Power cables
3. Data cables
4. Pneumatic pipes
5. Air pipes
6. Fuel pipes
7. RX cable / Satellite Receivers

Please try and separate these circuits as far as possible. It is advisable not to run RX cables near any kind of electrical fields. Make all switches and filler valves and charging sockets easy accessible. If you use S-bus technology it will simplify installation.

□ The F18 will come out tail heavy if you do not plan installation. It is very important to install all equipment as far forward as possible.

□ I have installed all batteries in nose.

□ Make sure the servo wires is routed for the job!

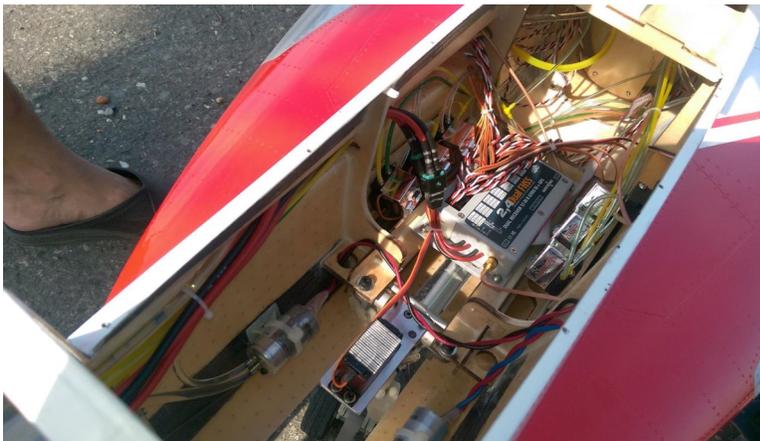


Photo 62



Photo 63



F18 arf pro

Assembly & Operation Manual

BEFORE YOU FLY

It is assumed that the builder of this kit has acquired the basic skills and knowledge necessary to make a safe and functional radio control installation into a model. Therefore, these notes are intended only to assist that experience.

TRAVEL MAX SETTINGS: F18 C/D

- | | |
|-------------|------------------------------|
| 1. Elevator | +85mm/ -85mm |
| 2. Rudder | 35mm /27mm take off |
| 3. Aileron | 25mm down / 15mm up |
| 4. Elevons | +55mm / -55mm |
| 5. Flaps | 70mm landing / 38mm take off |
| 6. Slats | 15mm take off / 25mm landing |

[MIX F18C FLAPERON & RUDDER
& ELEVATOR VIDEO](#)

TRAVEL MAX SETTINGS: F18 E/F

- | | |
|-------------|------------------------------|
| 1. Elevator | +90mm/ -90mm |
| 2. Rudder | 30mm /28mm take off |
| 3. Aileron | 25mm down / 15mm up |
| 4. Elevons | +60mm / -60mm |
| 5. Flaps | 75mm landing / 40mm take off |
| 6. Slats | 15mm take off / 25mm landing |

[MIX F18E FLAPERON & RUDDER
& ELEVATOR VIDEO](#)

NB: Make sure you have setup the controls as in video links. This F18 can not be controlled without mixing of ailerons and elevons. Do not try to fly with ailerons only!

Do not change location of CG unless you are experience and have some feel of model before!

**F18E/F 165mm
F18C/D 165mm**



Photo 64

- Set the maximum speed to 200mph! The prototype was tested with 2 x K120G turbine.

F18 arf pro

Assembly & Operation Manual

Take-Off

Do some taxi tests before your flight! Make sure you are familiar with all settings and make sure the model track straight on the ground without rudder input.

Choose a fine day for the maiden flight. Select take off flap or flight mode 1 and open throttle. Gently pull back on stick 40m down the runway. Raise the flaps and gear at safe altitude. If the ailerons feel sluggish—select higher rate. Land and adjust to fit your need. If no flaps are used—it will leap into air because of trailing LG.

Slow Flight

Most of the first flight should be utilized to get familiar with the slow speed flight characteristics. Select the flaps to the takeoff position; there should be no pitch change. Extend the gear and select full landing flaps; adjust the power to maintain level flight and a speed of about 80—90mph. Climb to a safe altitude and slow the model to the edge of a stall to know where that edge is.

Landing

Fly a complete circuit before landing. Approach from the downwind side and lower the LG. Fly a complete circuit getting use to the power required. On the next circuit lower the flaps. It is very important to get the nose up for landing. Use elevator to get nose up and throttle to change altitude. You will need to work out a glide slope to fit your runway. Just before touch down—pull more elevator to flare model. If you do not get the nose up—it will be difficult to stop in time. Do not pull to much elevator in glide slope as you may ran out of elevator. There is fine line between just right and too much. Do not use speed brakes for landing on maiden. When you are happy and more experienced the speed brakes will slow model down faster. Let the model roll out and apply brakes.

One engine

We have tested the F18 for single engine flight. It is very stable if your setup is correct as per manual and the videos shown for control surfaces.

We suggest lower power and fly landing circuit and land. Only extend LG and flaps on a long final once F18 is lined up with the runway.

We at Skymaster wish you many happy flights with your F18! Add some landing lights and load those weapons.

Anton Lin and Skymaster Team!



F18 arf pro

Assembly & Operation Manual

Ordinance



Photo 65

Skymaster produce a set of ordinance. It can be ordered painted or unpainted.

All ordinance are slide fit for easy removal. All hard points and slots factory installed!

